




# INSTALLATION INSTRUCTIONS: HARLEY-DAVIDSON TOURING VO2 RADIANT III AIR INTAKE PART# 41450 / 71450 / 71453

Congratulations, you have purchased the finest air intake available for your motorcycle. Your Vance & Hines air intake is designed and crafted for performance, quality and style. Please follow the instructions below, check air intake system for missing or damaged parts and if you need any assistance please contact our technical support line (562) 921-7461.

Exempt from emission tampering regulations under CARB EO# D-632-7 for 2008-2016 Harley-Davidson Touring and 2016-2017 Harley-Davidson Softail models.

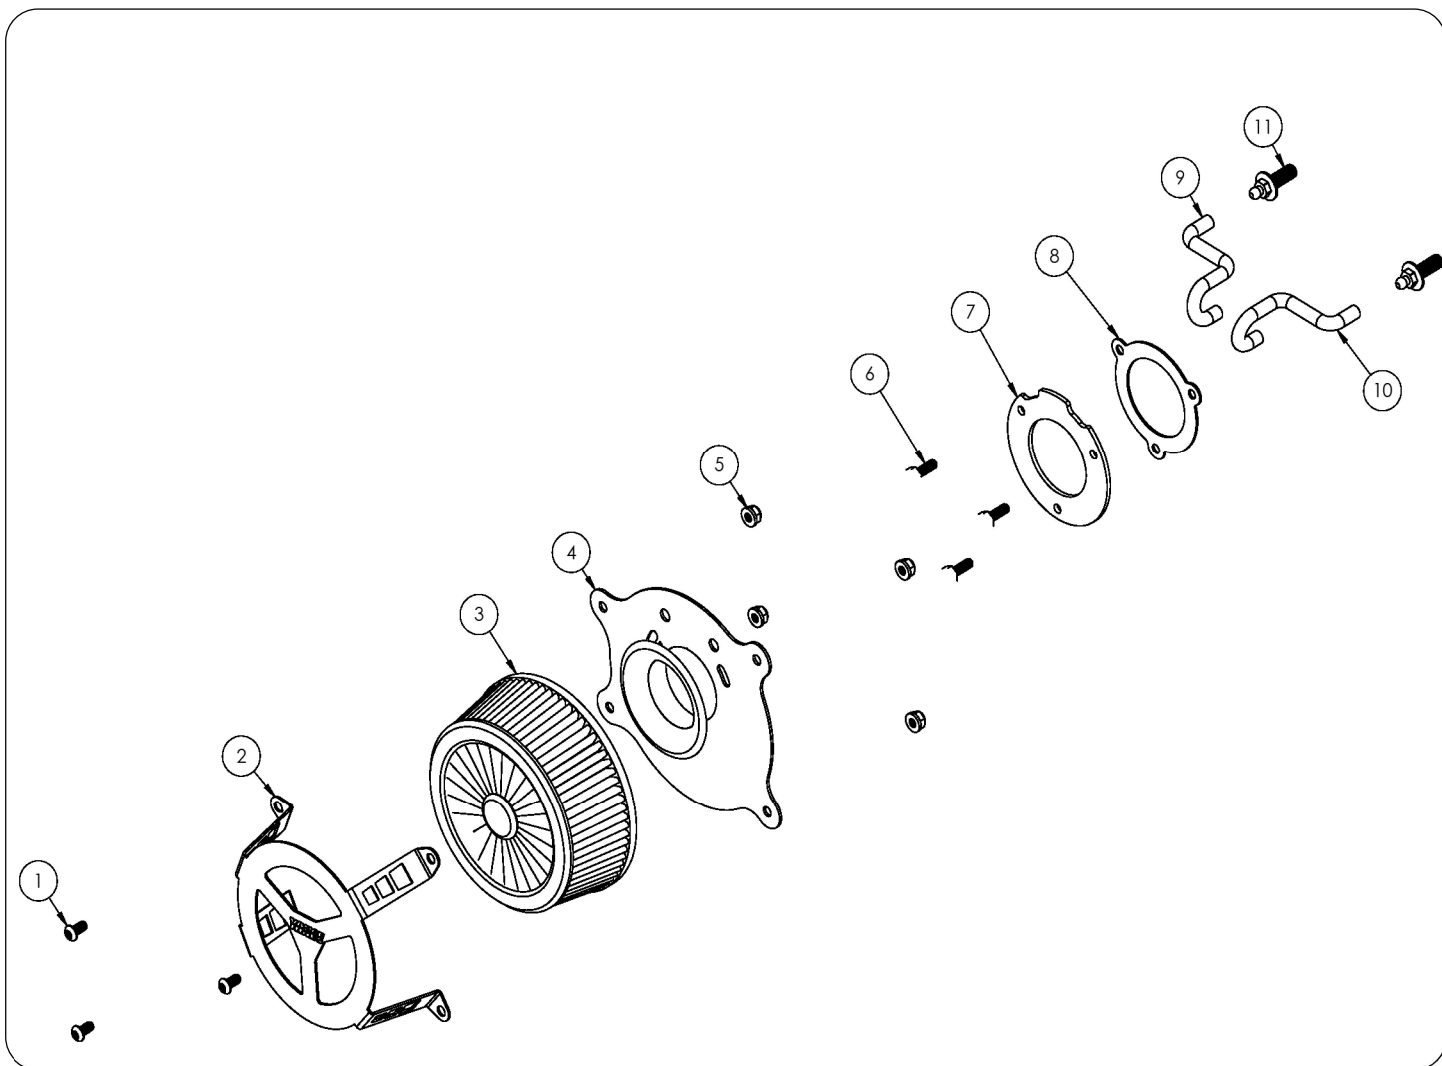


## PARTS LIST


NO.	Description	Qty.
1	1/4-20x1/2 Button Head Screw	4
2	Air Filter Cage	1
3	Air Filter	1
4	Venturi Backing Plate	1
5	Serrated Flange Nuts	4
6	1/4-20x3/4 Hex Bolt	3
7	Backing Plate Stiffener	1

8	Throttle Body Gasket	1
9	Rear Breather Hose	1
10	Front Breather Hose	1
11	Breather Bolt	2


## TOOLS REQUIRED

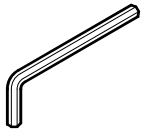


**T27 Torx wrench**

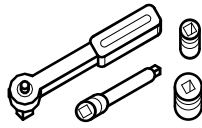

**1/4" or 3/8" Drive Ratchet  
7/16" Hex Socket and 5/16" and  
5/32" Allen Socket, 11mm Hex**

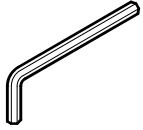

**Allen Wrenches: 3/16",  
5/32"**

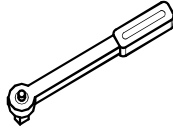

**Inch-pound Torque  
wrench**

**Loctite 243 (blue)**

**NOTE:** For 08-16 Touring & 15-17 Softail & 16-17 Low Rider S & 11-17 CVO Softail Fitment: CVO, Softail S & all models with Screamin' Eagle Style Stage 1 Air cleaner requires purchase of Harley Part #27712-08 Induction Module Support Bracket

## OEM SYSTEM REMOVAL

1. Take off the OE air filter cover by removing the 5/16" x 1/2" OE button head cap screw in the center. Set the air filter cover and the screw aside for re-use. On some models the cap screw may be covered by a vanity cover. Carefully pull this cover off that is held on by velcrow.
2. This will expose the filter element, which is then removed by taking out the three Torx head cap screws.
3. Remove the breather hoses from the cylinder head breather bolts by gently pulling on them.
4. Now remove the backing plate and gasket by unbolting the cylinder head breather bolts. Be sure that the surface is clean and dry.

## V&H AIR INTAKE INSTALLATION

1. For a clear understanding of this installation, it is best to refer to the exploded view diagram while reading these instructions.
2. When installing or servicing the air cleaner, apply Loctite 243 (blue) to the threads of all the fasteners.
3. Install the two cylinder head breather bolts **(11)**. **NOTE:** Tighten the cylinder head breather bolts to 120-144 in-lbs (13.6-16.3 Nm).
4. Install the rear and front breather hoses **(9)** & **(10)** through the top two holes in the venturi backing plate **(4)** aligned as shown.
5. Using the three 1/4"-20 x 3/4" hex bolts **(6)** sandwich the venturi plate**(4)**, backing plate stiffener **(7)** , the gasket **(8)**, and install onto the throttle body. Make sure the inside edges of all of these parts are aligned before tightening to 55-60 in- lbs (6.2-6.8 Nm).
6. Install the air filter cage **(2)** onto the air filter **(3)** with the 1/4-20 button head cap screws **(1)**. **NOTE:** Make sure to orient the air filter so that the metal fin is hidden behind the spoke of the air filter cover.
7. Place provided CARB EO Decal in a visible location on the motorcycle's chassis near the air intake.
8. After 100 miles check to be sure that all bolts are still tight. Periodically ensure that these screws remain tight.

Emissions Notice:

In California, in order to meet Air Resources Board emissions requirements, certain aftermarket part applications have been identified as replacements, and others have received ARB Executive Orders. All other emissions related aftermarket parts are for competition use only. A list of replacement parts and EO parts, and corresponding fitment is provided at [vanceandhines.com/california](http://vanceandhines.com/california).

Warranty:

All Vance & Hines products are warranted against defects in material and workmanship for a period of 90 days. This warranty does not cover discoloration or rust. This warranty shall be limited to the repair or replacement of the product, which may be proven defective under normal use. Vance & Hines will not warranty any system that has been abused, misused, improperly installed or modified.

Dealers or distributors are not authorized to make dispositions binding upon Vance & Hines. Vance & Hines will not be responsible for any labor charges incurred in removing or replacing any system under warranty. A return authorization number and a copy of the original purchase invoice must accompany all returns. Parts returned without a return authorization may be refused.



## Connect. Tune. Ride.

From the team that brought you The Fuelpak FP3, the best-selling ECU tuner in the world for Harley-Davidson motorcycles, the Vance & Hines FP4 is the most intuitive tuning tool on the market, giving you the power to control your motorcycle's tune and offers the best-in-industry support from our FP4 technicians, all from your smartphone.

- Download and Flash Maps
- Live Data Viewing
- Autotune Feature for Map Customization

Visit [vanceandhines.com](http://vanceandhines.com) to learn more about FP4.

**Qualified Manufacturer Declared 49-state Federal Emissions Compliant Part.**



13861 ROSECRANS AVENUE / SANTA FE SPRINGS, CA 90670

SALES: (562) 921-5388  
TECHNICAL: (562) 926-5291  
FAX: (562) 802-0110

**vanceandhines**  
.com